


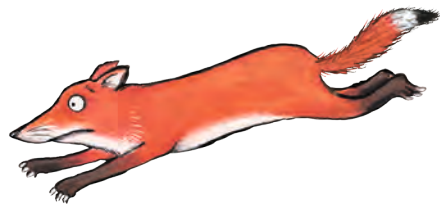

There's no such thing
as a gruffalo?



The Gruffalo © Orange Eyes Limited
2009. All rights reserved.

The Gruffalo's Child © Orange Eyes
Limited 2011. All rights reserved.

www.magiclightpictures.com

The Gruffalo © 1999
Julia Donaldson & Axel Scheffler.

The Gruffalo word mark and logo are
trade marks of Julia Donaldson and
Axel Scheffler and used under licence.
Licensed by Magic Light Pictures Ltd.



Jumbo Group
Westzijde 184, 1506 EK Zaandam,
The Netherlands

James Galt & Co. Ltd.,
Cheadle, Cheshire, England, SK8 2EA.

© 2024 Koninklijke Jumbo B.V.
A Jumbo Group company.

jumboplay.com




My First
speaking
companion

Audio
player



3+

Gruffalo accompanies your little one at play during the day and at bedtime at night.

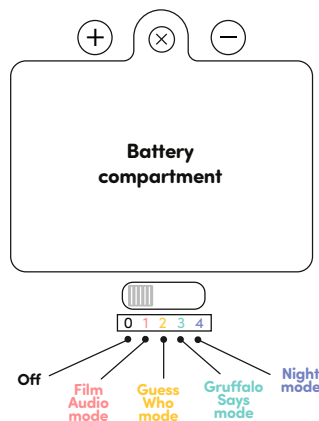

How to play:

- Choose one of the four available modes: **Film Audio, Guess Who, Gruffalo Says and Night mode.**
- The two small round buttons with the + and - signs allow you to adjust the **volume**.
- To start, select a game mode and follow the instructions.
- In **modes 1, 2 and 3**, press the Gruffalo's foot button **once** to skip to the next audio and **twice in a row** to listen to it again.
- In **mode 4**, press the button **once** to pause, **again** to resume, and **twice in a row** to return to the beginning.

Contents:



Film Audio mode

Listen along to the audio from the magical films of *The Gruffalo* and *The Gruffalo's Child*.



Guess Who mode

Listen carefully to the clues and guess which character it is! Can you figure it out?



Gruffalo Says mode

Play "Gruffalo Says" and follow his commands, but only if Gruffalo says!



Night mode

Breathe deeply, then drift off to sleep with a soothing bedtime story.

Please keep this instructions document for further reference.

Using a suitable screwdriver, undo and remove the battery cover located under the unit. Insert the required batteries into the compartment ensuring they are installed the correct way around. The polarities are marked inside the battery compartment. Reassemble the battery cover and tighten the screw to secure. Do not over tighten. Batteries should be inserted and removed by an adult. We recommend the use of alkaline batteries. Only use the type of batteries specified in this user manual, or equivalent type. Follow the polarity diagram inside the battery compartment and the polarity markings on the batteries. An incorrect location may either damage the toy, or cause battery leakage, or, to an extreme degree, lead to battery explosion. Rechargeable batteries should not be used. Do not try to charge non-rechargeable batteries, as they may leak or explode. Replace all batteries at the same time. Do not mix new with old batteries. Do not mix different types of batteries (i.e. alkaline and zinc carbon) or re-chargeable (nickel cadmium) batteries. Remove the batteries during long periods of non-use. Always remove exhausted batteries from the product. Battery leakage and corrosion can damage the product. Do not short-circuit the supply terminals. Store batteries away from metal objects. When rechargeable batteries are used anyway: Rechargeable batteries shall be charged only under the supervision of an adult. If using rechargeable batteries with a child-use charger, the child must be at least 8 years of age. Rechargeable batteries shall be removed from the toy before being charged (if they can be removed). Do not dispose of batteries in fire, as they may leak or explode. Never disassemble batteries. If a battery is swallowed, consult a Doctor or Medical Facility. Don't forget to take the product with you. If battery leakage occurs and comes in contact with the skin or eyes, wash immediately with lots of water. Strong Electro Magnetic Interference may disturb the normal function of the product. If so, simply reset the product to resume normal operation by following the instruction manual. In case the function does not resume, please use the product in another location. Do not immerse battery operated products. Wipe clean only. Keep the unit out of direct sunlight and away from any direct heat source. WASTE ELECTRICAL PRODUCTS AND BATTERIES SHOULD NOT BE DISPOSED OF WITH HOUSEHOLD WASTE. PLEASE RECYCLE WHERE FACILITIES EXIST. CHECK WITH YOUR LOCAL AUTHORITY FOR RECYCLING ADVICE.

STATEMENT OF FCC COMPLIANCE:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

