




with **Coco**

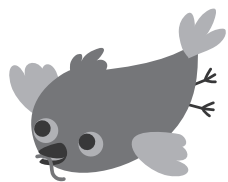

Let's find out more about animals!



CONTENTS: 16 animal cards and a fun interactive creature (Requires 2 x AAA batteries. Batteries not included).

AIM OF THE GAME: Learn the animals' names, explore fascinating facts about them, and discover colours in a fun, interactive way!

PREPARATIONS

Turn the switch on the back of Coco to the ON position and place the animal cards on the table with the images facing upwards. Coco is set to Fun mode by default. You can select a different game mode by pressing the appropriate button on the front.

GAME MODE

1. FUN MODE: Learn the animals' names and the sounds they make!

Press the button with the music note to select this game mode and place Coco on one of the cards. Then press Coco's hat to hear the name and sound of the animal on the card while listening to a fun musical tune.

2. DISCOVERY MODE: Let's discover the animals!

Press the button with the magnifying glass to select this game mode. Place Coco on one of the cards and then press his hat. Coco will tell you something about the animal you have chosen: the name, colour and interesting bit of information. Do you want to discover more? Press Coco's hat again before going to the next card.

3. QUESTION MODE: Test your knowledge!

Press the button with the question mark. Coco will ask you questions about one of the animals that you just learned something about with him. Try to guess which animal it is. Place Coco on the right card, then press on his hat to see if you guessed correctly. If so, Coco will congratulate you. If not, he will give you the right answer so that you know for next time! If you wait a few seconds, Coco will ask you a new question.

• WARNING:

Please keep this instructions document for further reference.

Using a suitable screwdriver, undo and remove the battery cover located under the unit. Insert the required batteries into the compartment ensuring they are installed the correct way around. The polarities are marked inside the battery compartment. Reassemble the battery cover and tighten the screw to secure. Do not over tighten. Batteries should be inserted and removed by an adult. We recommend the use of alkaline batteries. Only use the type of batteries specified in this user manual, or equivalent type. Follow the polarity diagram inside the battery compartment and the polarity markings on the batteries. An incorrect location may either damage the toy, or cause battery leakage, or, to an extreme degree, lead to battery explosion. Rechargeable batteries should not be used. Do not try to charge non-rechargeable batteries, as they may leak or explode. Replace all batteries at the same time. Do not mix new with old batteries. Do not mix different types of batteries (i.e. alkaline and zinc carbon) or re-chargeable (nickel cadmium) batteries. Remove the batteries during long periods of non-use. Always remove exhausted batteries from the product. Battery leakage and corrosion can damage the product. Do not short-circuit the supply terminals. Store batteries away from metal objects. When rechargeable batteries are used anyway: Rechargeable batteries shall be charged only under the supervision of an adult. If using rechargeable batteries with a child-use charger, the child must be at least 8 years of age. Rechargeable batteries shall be removed from the toy before being charged (if they can be removed). Do not dispose of batteries in fire, as they may leak or explode. Never disassemble batteries. If a battery is swallowed, consult a Doctor or Medical Facility. Don't forget to take the product with you. If battery leakage occurs and comes in contact with the skin or eyes, wash immediately with lots of water. Strong Electro Magnetic Interference may disturb the normal function of the product. If so, simply reset the product to resume normal operation by following the instruction manual. In case the function does not resume, please use the product in another location. Do not immerse battery operated products. Wipe clean only. Keep the unit out of direct sunlight and away from any direct heat source. WASTE ELECTRICAL PRODUCTS AND BATTERIES SHOULD NOT BE DISPOSED OF WITH HOUSEHOLD WASTE. PLEASE RECYCLE WHERE FACILITIES EXIST. CHECK WITH YOUR LOCAL AUTHORITY FOR RECYCLING ADVICE.

1110100794 Model: S24501
Published by Koninklijke Jumbo B.V.
Westzijde 184, 1506 EK Zaandam,
The Netherlands

James Gait & Co. Ltd,
Sovereign House Stockport Road
Cheadle, Cheshire, SK8 2EA, U.K.

© 2024 Diset, S.A.
A Jumbo Group company.
jumboplay.com

